
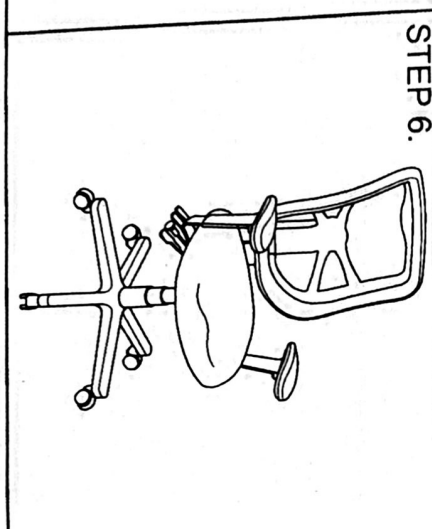
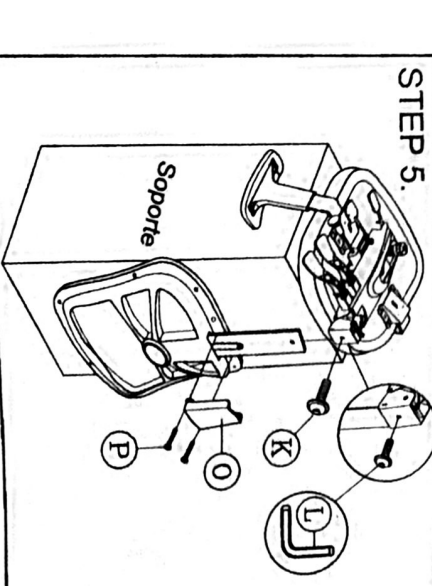
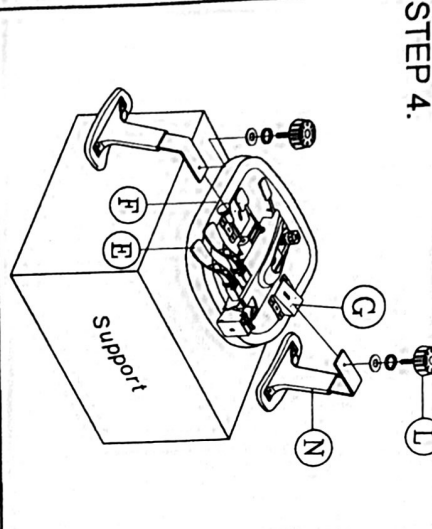
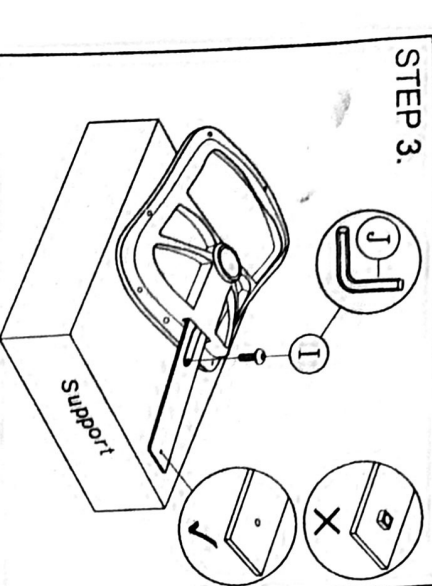
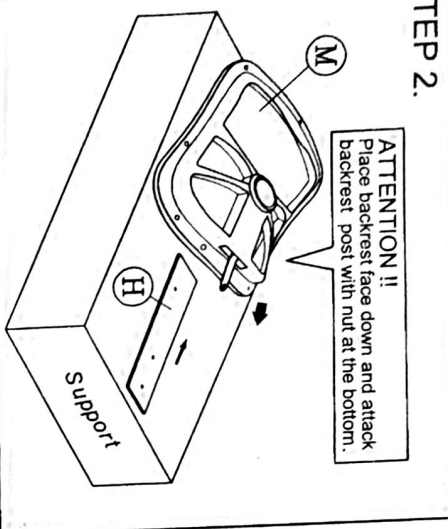


ASSEMBLY INSTRUCTIONS

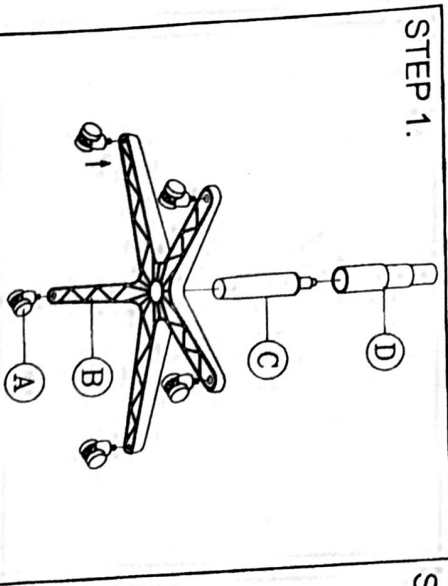

<p>A</p> <p>Caster (5)</p>	<p>B</p> <p>Base</p>	<p>C</p> <p>Seat Post</p>
<p>D</p> <p>Seat Post Cover</p>	<p>E / F / G (pre-assembled)</p> <p>(E) Mechanism (F) Seat (G) Arm Bracket (2)</p>	<p>J</p> <p>M5 Size Allen Wrench</p>
<p>H</p> <p>Backrest Post</p>	<p>I</p> <p>Backrest Screw (8x10mm)</p>	<p>M</p> <p>Backrest</p>
<p>K</p> <p>Perno del respaldo 10x23 mm</p>	<p>L</p> <p>Arm Width Adjustment Knob + Washers (2)</p>	<p>N</p> <p>Armrest (2)</p>
<p>N</p> <p>Fuelle del respaldo</p>	<p>O</p> <p>Tornillo del fuelle del poste del respaldo(2)</p>	

Model: ALE-EL41ME10B / ALE-EL42ME10B
 Manufactured for / Hecho para / Fabriqué pour Alera® / Essendant Co.
 1 Pkwy North, Ste 100, Deerfield, IL 60015 © 2015 Essendant Co.
 Made in / Hecho en / Fabriqué à Taiwan
 Product support and parts : 1-800-733-4000
 Ayuda del producto y partes / Support technique et pièces